



## BEFORE THE ASSEMBLY

When you receive the package, please check if the parcel is in good condition and doesn't have any damage



**3** Cut the cable ties



**1** Check the condition of the package



**2** Take the bicycle out



**4** The parts pictured above are only used to protect the bicycle during transit. You may discard them after the assembly



**5** Check the tools on the accessory box

## INSTALLING THE DISK BRAKE



**1** Slide the brake cable through the slot on top of the fork



**2** Slot it into the barrel adjuster on the caliper mount



**3** Slot it into the cable intervals



**4** Tighten the anchor bolt

# BICYCLE ASSEMBLY MANUAL

CONTACT US 8AM-9PM EST  
INFO@IDAYSHIPPING.COM  
212-888-2921  
WWW.HOMELANDHARDWARE.COM

## INSTALLING THE HANDLE BAR




**1** Slightly unscrew the bolts on the base of the stem to rotate the stem



**2** Align the stem with the fork. Make sure the fork is pointed forward



**3** Unscrew the stem face plate from the stem

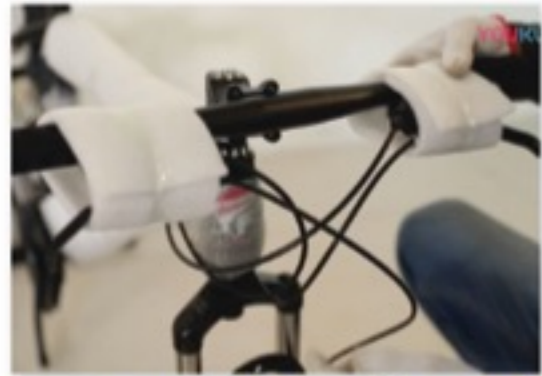

**4** Center the handle bar in the stem, be sure to keep your brake and shifting cables out in front of the bars



**5** Screw in the bolts alternating between opposite bolts and tighten until snug



**6** Tighten the bolts on the base of the stem

## MOUNTING THE FRONT WHEEL

### ON THE 27 FLAGSHIP VERSION



**1** Remove the guard bar



**2** Align the front wheel in the dropouts like pictured above



**3** Take the quick-release skewer and remove the end cap and spring from one side



**4** Slide the uncapped end of the skewer through the wheel's hub



**5** Replace the spring and end cap on the opposite side once it's through



**6** Tighten the quick release, then "close" the qr lever by pushing it up against the fork

## MOUNTING THE FRONT WHEEL

### ON THE 21/24 SPEED LUXURY VERSION




**1** Remove the guard bar



**2** Loosen the axle nuts using your fingers



**3** Align the front wheel in the dropouts, screw in the axle nuts

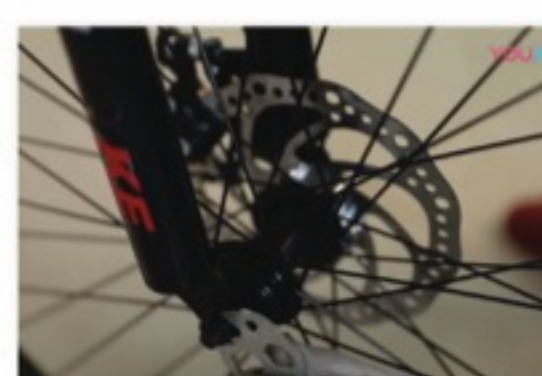

**4** Use the wrench to tighten the axle nuts



**1** Loosen the seat post collar



**2** Slide the seat post into the frame



**3** Adjust the saddle height and tighten down the seat post collar



**4** Use the wrench to tighten the bolt underneath the saddle until is secure

## INSTALLING THE SADDLE